

ProSelect[®]

Professional Equipment

TOPS PET PRODUCTS, TOPSFIELD, MA 01983

Thank you for your purchase of this ProSelect Adjustable Diner. This versatile diner adjusts easily to suit the needs of your growing dog and features an H-shaped base for added stability. Also improves body alignment and digestion by allowing dog to feed in a standing position.

Parts list:

- Base for stand (1)
- Upright bar (1)
- Dish holder (1)
- Dish Lock (1)
- Dishes (2)
- Threaded adjusting bolt for upright (2)
- Star bolt (1)

Instructions:

1. Insert Star Bolt up through underside of Base, and mount Upright Bar onto the Bolt. Hand tighten.
2. Attach Dish Holder to Upright Bar by sliding it onto the upright and tightening the Adjustment Knob into hole on Dish Holder when holder is at desired height.
3. Insert Dishes.
4. Slide Dish Lock onto Upright Bar and tighten down onto Dishes.

Note: If the stand does not sit level on the floor, turn each of the black feet until you find the one that moves. Extend this until the diner is level.

