

## MANUFACTURER'S 12 MONTH LIMITED WARRANTY

Your Joyzze product is warranted against manufacturer's defects for one year from the date of purchase. If your Joyzze clipper is determined to be defective in material or workmanship during the warranty period, Joyzze will repair or replace the product. Customer only pays shipping. Return the defective product along with proof of purchase, enclose a return fee of \$15.00 USD, and a note explaining the problem to:

**Joyzze Service, P.O. Box 440098, Kennesaw, GA 30160.**

Modifications or repairs not made by Joyzze™: accidental damage, misuse, neglect, use of unauthorized attachments or parts are not covered by this warranty.

For customer service please e-mail to [info@JOYZZE.com](mailto:info@JOYZZE.com), or call toll free 877.456.9993 ( U.S. and Canada)

For outside U.S. and Canada, please dial +1 877.456.9993

# JOYZZE

**CLIPPERS & BLADES REIMAGINED™**

JOYZZE USA, INC.

📍 P.O. Box 440098 Kennesaw, GA 30160 USA

☎ 877.456.9993 ( 877.4JO.YZZE )


🌐 [JOYZZE.com](http://JOYZZE.com)

# JOYZZE

**CLIPPERS & BLADES REIMAGINED**

## Piranha Cordless Clipper User Manual

*Model: JZD-1*


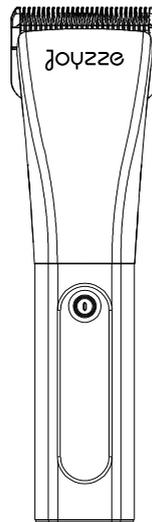


For manual in other languages,  
please visit [Joyzze.com](http://Joyzze.com)

# CLIPPER SPECIFICATIONS

Model	Piranha
Input	5V --- 1A 5W
Power	10W Max
Lithium Battery	3.7V 2600mAh
Charge Time	80 minutes
Run Time	240 minutes
Speed (2-Speed)	5000 - 6000 SPM
Noise	≤ 60 dB
Package Includes	Clipper Charging Base Attachment Combs: 3mm / 6mm / 10mm Non-Slip Sleeve USB Type-C Cable - 2.4m / 7.9ft. Cleaning Brush Lubricant oil - 8ml / 0.28oz Manual

## Accessories:

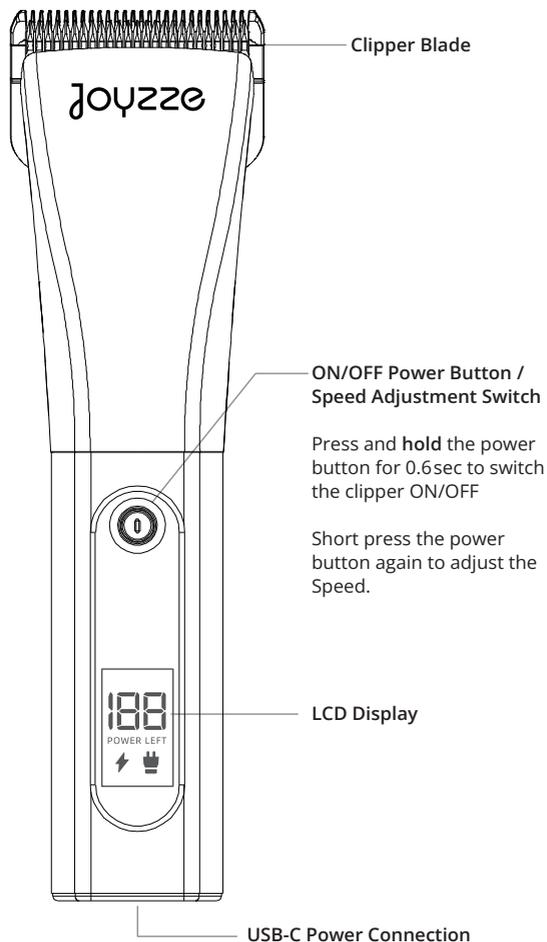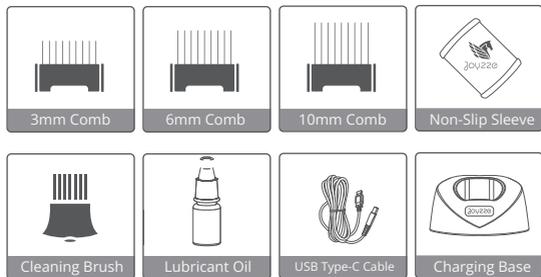



## CHARGING OPERATION

As shown in the picture connect the clipper to USB-C power supply for charging.


The clipper can be charged on the charging base or by plugging the cord directly into the back of the clipper.

The clipper can also be used while the cord is attached directly to the clipper.

Please note that the charging time will be longer if the clipper is put in use.

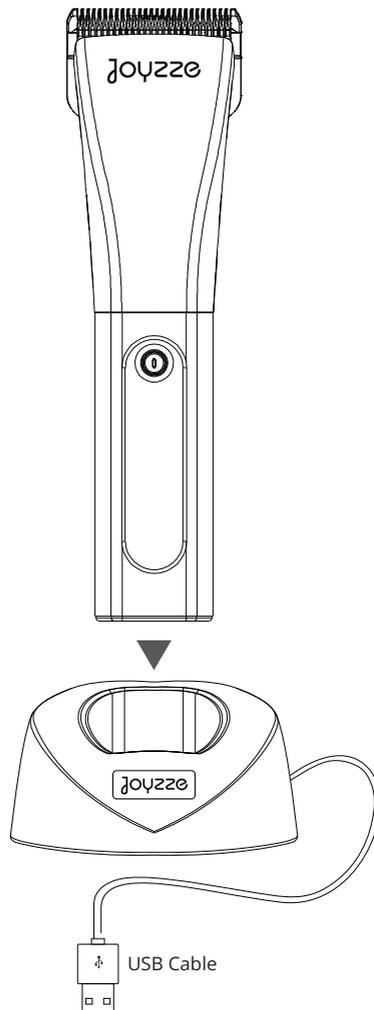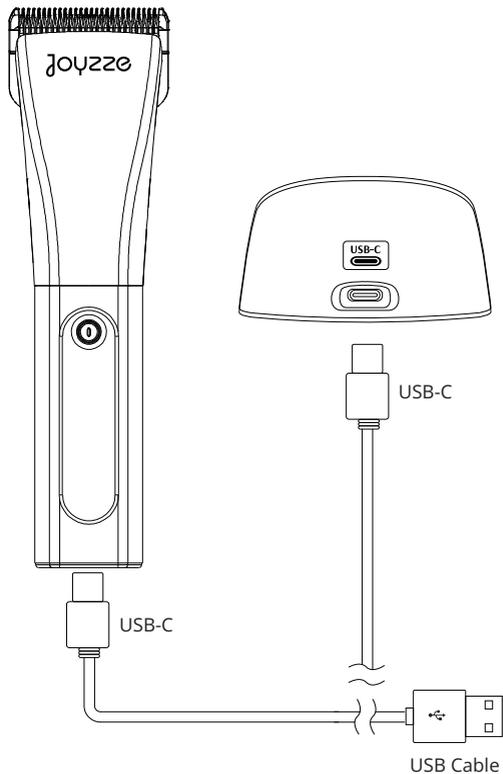

POWER DISPLAY WHILE CHARGING

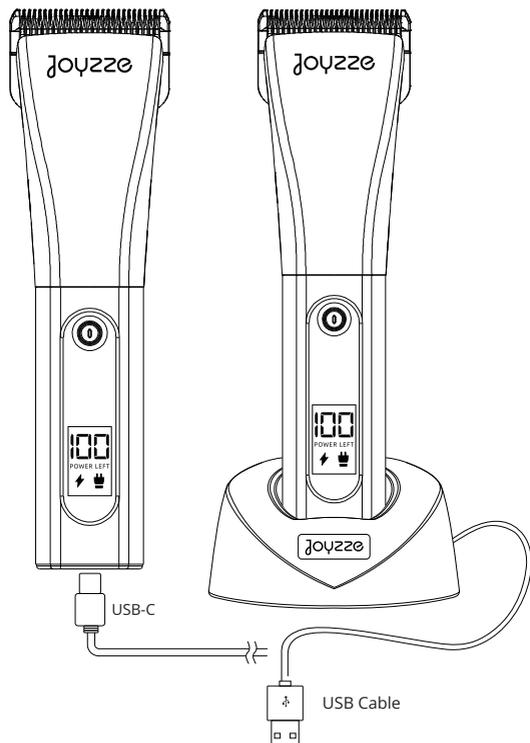

00—100

Power 0% - 100%:  
While charging, the numbers will flash  
Steady red light

POWER DISPLAY ON CORDLESS MODE

Low Speed Mode



Power 0%-100%: Displays remaining battery percentage

Power ≤15%: Flashing red light

High Speed Mode



Power 0%-100%: Displays remaining battery percentage

Power ≤15%: Flashing red light

High Speed Mode: Steady yellow light

POWER DISPLAY ON CORDED MODE

Low Speed Mode



Power 0%-100%: Flashing display of remaining battery percentage

Power ≤15%: Steady red light

High Speed Mode



Power 0%-100%: Flashing display of remaining battery percentage

Power ≤15%: Steady red light

High Speed Mode: Steady yellow light

## FAILURE TO CHARGE

Make sure the outlet is working and plugs are well seated in the clipper and outlet. If clipper still fails to charge return for maintenance (see Manufacturer's 12 Month Limited Warranty).

## LITHIUM-ION BATTERY USE, STORAGE, AND DISPOSAL

1. The Joyzze Clipper comes installed with a rechargeable lithium-ion battery. The battery does not develop a memory effect and can be recharged at any time.
2. If the clipper will be in storage from several months or longer, store with a partial battery charge of about 40%.
3. Store clipper in temperatures between 50°F/10°C and 104°F/40°C. Do not store in damp conditions.
4. Do not place the clipper near heat vents, radiators, or in direct sunlight. Optimal charging requires stable temperature conditions while sudden increases in temperature will reduce battery charge capacity.
5. Initially, new lithium-ion batteries may not fully charge, but will after several recharge cycles.
6. When not in use for extended periods, disconnect the adapter cord from the AC outlet.
7. Check with your municipal solid waste organizations for details on lawful disposal and recycling options.

## CLIPPER REPAIR SERVICE

Please call Joyzze Customer Service at 877.456.9993 or email us at [info@joyzze.com](mailto:info@joyzze.com) for assistance resolving any issues you're experiencing with your Joyzze Clipper. If your issues cannot be resolved over the phone or via Email we will assist you with the return for repair service process. If you wish your clipper to be serviced as well it should be carefully packed and mailed either Parcel Post Insured or U.P.S. to:

Joyzze P.O. Box 440098, Kennesaw, GA 30160.

See Manufacturer's 12 Month Limited Warranty, warranty Card, and Repair Service Instructions.




**CAUTION:** Turn OFF the clipper and disconnect from outlet before performing maintenance.

## BLADE REMOVAL, MAINTENANCE AND INSTALLATION


### ◆ BLADE REMOVAL

Hold the clipper face up with one hand and press the blade down with thumb, then remove the blade into the other hand to avoid dropping the blade.

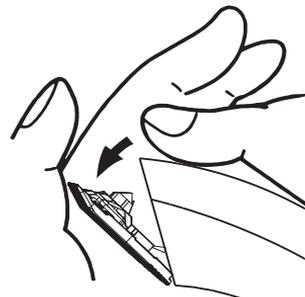


### ◆ BLADE MAINTENANCE

1. Blade cleaning: Press and hold the top of the shear blade. Use the cleaning brush to clean hair between the shear blade and the fixed blade.

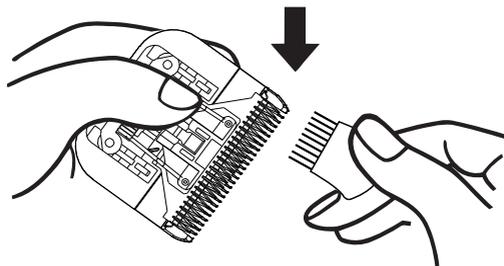


2. Blade oiling: Use 1-2 drops of lubricating oil on the 5 points shown below.

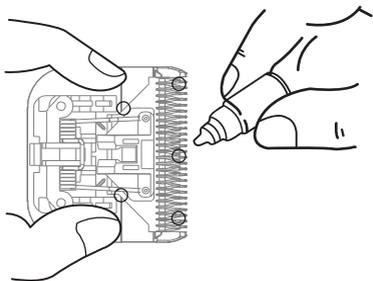

- ⊘ Do not detach the blade spring while maintaining to avoid malfunction.

## ◆ BLADE INSTALLATION

Hold the clipper face down with one hand and place the bottom of the blade aligning the middle of the blade with the clipper. Push the front of the blade down until it snaps into place.

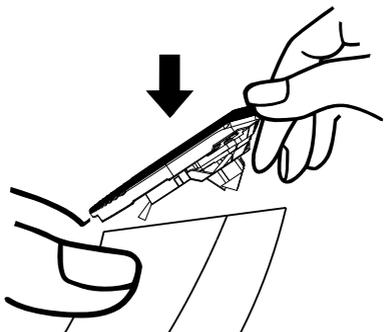

**50**  
0.2mm - 1/125"  
(Item: #0344)



**40**  
0.25mm - 1/100"  
(Item: #0351)



**30**  
0.5mm - 1/50"  
(Item: #0368)




**15**  
1.2mm - 3/64"  
(Item: #0375)



**10**  
1.5mm - 1/16"  
(Item: #0382)




**9**  
2mm - 5/64"  
(Item: #0399)

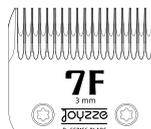


**7F**  
3mm - 1/8"  
(Item: #0405)



**5F**  
0.5mm - 1/50"  
(Item: #0412)

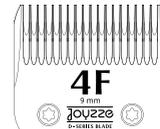

**4F**  
9mm - 3/8"  
(Item: #0429)

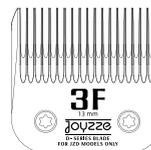

**10**  
13mm - 1/2"  
(Item: #0436)

**D-SERIES BLADE ARE DESIGNED FOR JZD MODELS ONLY**

**8 PIECE METAL COMBS SET (ITEM #: 0207)**

8 sizes stainless steel metal comb set specially designed for JZD-1 and A5 clippers for additional cutting lengths.

for more product information please visit [JOYZZE.com](http://JOYZZE.com).



 
1/8" - 3mm




1/4" - 6mm




3/8" - 10mm




1/2" - 13mm

 


5/8" - 16mm

 

3/4" - 19mm

 

7/8" - 22mm

 

1" - 25mm

Work perfectly with most A5 series and D-series style clippers

\* Please use #10 blades when using combs.

**FOR BEST RESULTS USE ON UNTANGLED BRUSHED HAIR.**

修改

Register your product within 30 days of purchase to activate its 12-month warranty. Warranty is valid only when this card is completed and returned within 30 days of purchase. Online registration and mail registration are both available.

**REGISTER ONLINE AT JOYZZE.COM****REGISTERED BY MAIL - PLEASE PREPARE:**

1. Complete warranty card.
2. Proof of purchase. Cut out UPC from product package.
3. Copy of receipt.

Mail to Joyzze, P.O. Box 440098, Kennesaw, GA 30160

**IF RETURNING FOR REPAIR SERVICE:**

1. Submit the Required with Registration information if not already registered.
2. Pack clipper in bubble wrap to protect during shipping.
3. Enclose a return fee of \$15.00 USD.

**IMPORTANT SAFETY INFORMATION**

When using an electrical appliance, basic precautions should always be followed, including the following:

**Read all instructions before using your Joyzze product.**

**DANGER: To reduce the risk of electric shock:**

1. Avoid placing or storing clipper near water or other liquids.
2. Do not use if clipper, plug, or charging base has been immersed in water or other liquid.
3. Unplug immediately if clipper falls into water or another emergency occurs.
4. Unplug cord from outlet and clipper except when charging.
5. Turn clipper off and unplug cord from outlet before cleaning or changing parts.

**WARNING: To reduce the risk of fire, electric shock, or personal injury:**

1. Clipper should never be left unattended when plugged in.
2. Supervision is necessary when used by, on, or near children or individuals with certain disabilities.
3. Use this clipper only for its intended use. Do not use attachments not recommended by Joyzze.
4. Do not use this clipper if cord or plug is damaged, if it is not working properly, if it has been dropped, or immersed in any liquid, return to Joyzze for repair.
5. Do not use an extension cord with this clipper.
6. Keep the cord away from heated surfaces.
7. For indoor use only. Do not use around aerosol products or where flammable gases, such as oxygen, are in use.
8. To avoid injury: never use this clipper with a damaged or broken blade or comb.
9. To disconnect: turn control to OFF then remove plug from outlet.
10. Use only the charging base supplied by Joyzze to recharge.
11. This clipper is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the clipper by a person responsible for their safety.
12. **KEEP OUT OF REACH OF CHILDREN.**
13. Remove battery before disposing of product.
14. Dispose of battery properly and safely.

**WARRANTY CARD:**

Salon / Customer's Name:	
Address:	
Telephone:	
E-mail:	
Date of Purchase (MM/DD/YY):	Serial Number:
City:	State:
Store / Distributor's Name:	