

TP2402 17 • Master Equipment FlashDry Control Stand Dryer Assembly Instructions

Parts List

- (A) Base Bars with Wheels (2)
- (B) Large Round Washer Plate (1)
- (C) Lock Washer (1)
- (D) Twist Bolt (1)
- (E) Bottom Pole (1)
- (F) Top Pole (1)
- (G) Dryer Body (1)
- (H) Rounded Screws with Rubber Feet (4)
- (I) Hose (1)
- (J) Concentrator Nozzles (2)
- (K) Hands-Free Nozzle (1)

Tools Required (Not Included):

Wrench

Phillips Screwdriver





1). Assemble the base by interlocking the two base bars (A).





- 2. Holding the two interlocked base bars together, carefully turn base upside down. Place the large round washer plate (B) at the intersection of the two base bars, aligning the holes. Next, place the lock washer (C) on the twist bolt (D), insert the large twist bolt into the aligned holes.
- 3. Holding the base bars together, turn the base rightside up. Be sure the large twist bolt is visible.



- 4. Screw the bottom pole (E) onto the large twist bolt. The end of the bottom pole with the large flat round plate is the end that screws onto the base.
- 5. Use a wrench (not included) to tighten the large twist bolt.





6. Insert the top pole (F) into the bottom pole. Secure the two poles together at desired height by tightening the knob on the side of the bottom pole.



7. Attach the dryer body (G) to the metal frame on the top pole using the four rounded screws with rubber feet (H). Use a Phillips screwdriver to tighten the screws.






- 8. Attach the hose (I) to the dryer by pulling the plastic neck clasp away from the hose and pressing the hose firmly against the dryer body. Then release the plastic neck clasp.
- 9. The concentrator nozzles (J) fit directly onto the end of the hose.



10. To use the hands-free nozzle (K), remove the hose and attach the hands-free nozzle by using the plastic neck clasp as shown in step 8.

LCD control panel instructions

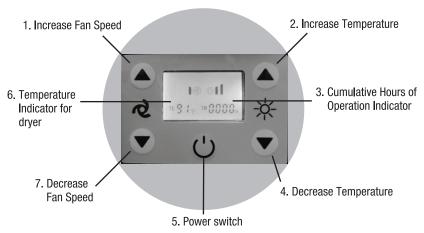

Instructions on how to reset hours of operation

- 1. Simultaneously hold down buttons 1 and 2 until the Cumulative Hours of Operation Indicator begins to flash.
- Within 3 seconds, simultaneously hold down buttons 1 and 7 to reset the Cumulative Hours of Operation Indicator.
- 3. Once the Cumulative Hours of Operation Indicator has returned to zero, release buttons 1 and 7.

FlashDry Control Stand Dryer Operating Instructions

- 1. Use this dryer with 110/120-volt electrical systems. Do not exceed the capacity of the circuit the dryer is being used on.
- 2. When operating the dryer, take care not to blow air directly into pet's eyes, ears, or other sensitive areas or body orifices.
- 3. Do not leave pet unattended while using this or any dryer.
- 4. Before shutting dryer off, set the air speed control to the lowest setting. This will extend the life of the machine by reducing stress on the motor during startup.
- 5. Do not insert any pins or metal objects into the workings of the machine. This can result in electric shock or cause the machine to short-circuit.
- 6. Do not block or obstruct the filter or diffuser. Clean the air intake regularly and keep it unblocked. Do not allow water to be drawn into the air intake.
- 7. Take care to protect the dryer housing from shock or sudden impact.

CARE INSTRUCTIONS

- 1. Carbon brushes must be changed every 600 to 700 hours of use.
- 2. Please clean the sponge filters on a regular basis by washing them or blowing air through them. Be sure to let the filters dry before reinstalling.
- 3. Keep the surface of the dryer clean and dry. Use a dry and soft cloth to clean the surface.
- 4. For stubborn stains and dirt, moisten the cloth with a mild detergent. Do not use harsh chemicals or cleaning agents.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to person when using your appliance, please follow these basic safety precautions.

- 1. Read ALL instructions before using this appliance.
- 2. Use this dryer ONLY for its intended purpose for drying dogs and cats.
- 3. Never unplug the dryer by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- 4. To protect against electrical hazards, do not immerse the dryer in water or any liquid, nor allow water to be drawn into the air intake.
- 5. Do not operate the dryer in the presence of explosive fumes.
- 6. Closely supervise children when the dryer is in use.
- 7. Unplug the dryer before cleaning, before making any repairs, or when the dryer is not in use.
- 8. This dryer should be connected to a grounded power outlet with the proper electrical supply. Please see the operating instructions.
- 9. Repair or replace any loose or worn parts immediately.
- 10. Do not operate the dryer when parts are missing or broken.
- 11. Do not use the dryer outdoors.
- 12. Do not operate the dryer if it is damaged or malfunctioning in any way. Contact PetEdge Customer Service at 800-638-5754.
- 13. Avoid contact with hot surfaces.
- 14. Do not wrap cord around motor enclosure. Continuous heat from the motor may damage the cord insulation and cause electric shock.

LIMITED WARRANTY

This Master Equipment® FlashDry Control Stand Dryer is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment® product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact Boss Pet Products Customer Service at 1-800-638-5754 regarding any defective product. Boss Pet Products will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. Boss Pet Products will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than Boss Pet Products or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchase:

