

Parts List

- A. Nozzles
- B. Hose
- C. Air Filter
- D. Power Switch
- E. Air Speed Control Switch
- F. Handle



Variable Speed Cannister Dryer Owner's Manual

Limited Warranty


This Master Equipment® Variable Speed Cannister Dryer is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact PetEdge Customer Service at 1-800-738-3343 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure, or malfunction of this product caused by normal wear, abuse, misuse, or unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided by the express warranty. Some states do not allow limitations on how long an implied warranty lasts, or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Date Purchased: _____

Item # TP3724 95
Master Equipment® Variable Speed Cannister Dryer - White



Manufactured for
 © Boss Pet Products, Inc., Danvers, MA 01923
 MADE IN CHINA

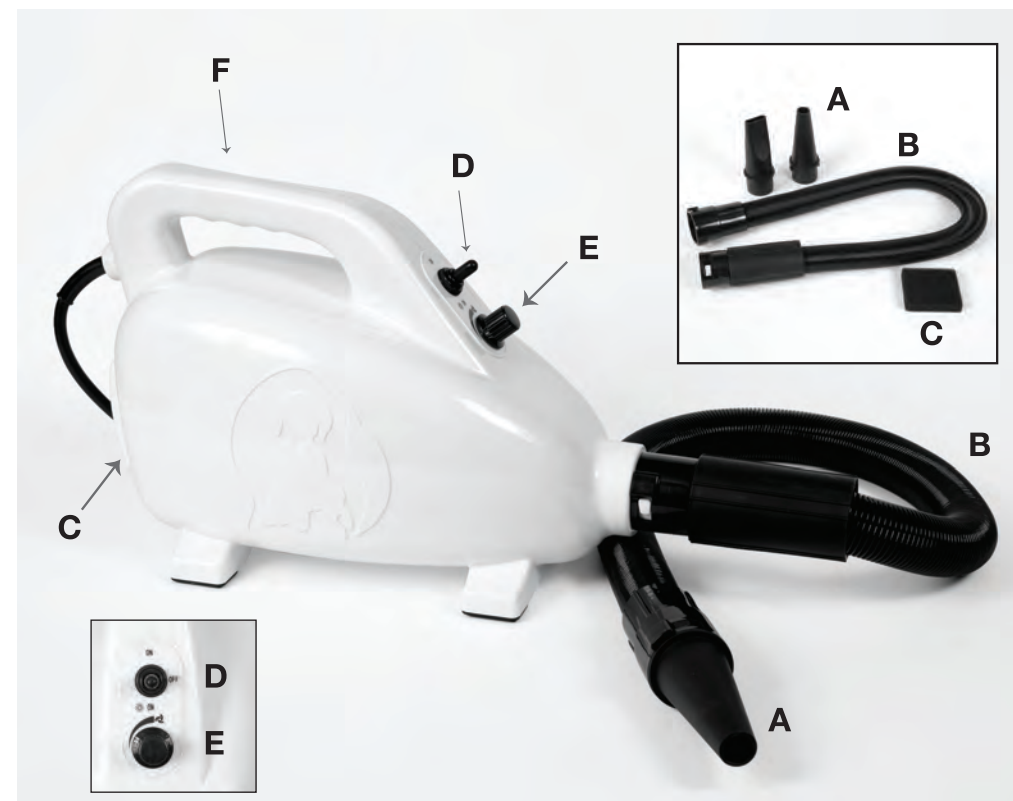

Dryer Specifications	Motor	Air Volume	Air Speed	Amps	Volts	Watts
	1.2 HP	80.8 CFM	9,843 FPM	12.5	110	1,400

FEATURES:

- Adjustable air speed
- Quiet and lightweight

Assembly Instructions

1. Slide the end of the Hose (B) onto the Dryer's outlet, and secure by twisting to lock Hose.
2. Slide the desired Nozzle (A) onto the other end of the Hose (B) and secure in place by twisting to lock Nozzle.
3. To replace filter, press tab on filter cover and pull outward. Replace old filter with a new one. To replace cover, insert Tabs of filter cover into slots in Dryer, press cover in place securely.



Operating Instructions

1. Turn on the Power Switch (D) and adjust the Air Speed Control Switch (E) until you find the appropriate air speed.
2. Clean the Air Filter (C) regularly. To prevent blockage of the air intake and protect the motor, regularly remove and clean or replace the air filter.
3. When it's time to change the dryer filter, remove the three filter cover and insert a new filter. Make sure the covers are snapped securely into place.
4. If the dryer stops working suddenly, please ensure that it is plugged in. If the dryer is connected to a power supply, but is still not working, contact PetEdge Technical Support for more information, or to schedule maintenance—DO NOT disassemble and attempt to repair, as this will void any and all warranties.

Maintenance Instructions

1. Keep the dryer clean by wiping down with a damp cloth.
2. Never clean the unit with water.
3. When not in use, unplug and store the dryer in a dry indoor place, out of reach of children.

Safety Instructions

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, please follow these basic safety precautions.

1. Read ALL instructions before using this appliance.
2. Use this dryer only for its intended purpose for drying dogs and cats.
3. Never unplug the dryer by pulling on the power cord. Always grasp the plug firmly and pull straight from the outlet.
4. To protect against electrical hazards, do not immerse the dryer in water (or any other liquid), or allow water to be drawn into the air intake.
5. Do not operate the dryer in the presence of explosive fumes.
6. Closely supervise children when dryer is in use.
7. Unplug the dryer before cleaning, before making any repairs, or when dryer is not in use.
8. This dryer should be connected to a grounded power outlet with the proper electrical supply. See operating instructions.
9. Repair or replace any loose or worn parts immediately.
10. Do not operate the dryer when parts are missing or broken.
11. Do not use the dryer outdoors.
12. Do not operate the dryer if it is damaged or malfunctioning in any way.
13. Avoid contacting hot surfaces.
14. Do not wrap cord around motor enclosure. Continuous heat from the motor may damage cord insulation and cause electric shock.

Troubleshooting

For any problems, contact PetEdge Customer Service at 1-800-738-3343