

## **TP2316 60 11 Master Equipment® Pro Deluxe II Stainless Steel Tubs Left Plumbed**

## **Parts List**

- (A) Elevated Overhead Grooming Arm
- (B) Sprayer Holder
- (C) Alloy Sprayer
- (D) Groomer Loops
- (E) Hair Catching Drain Insert



- 1). Unpack and assemble the Leg Base with bolts.
- 2). Place the Tub Basin onto the Base Leg. Bolt the Tub Basin to the Leg Base by putting bolts into the holes on the bottom of both sides of the Tub Basin.
- 3). Assemble the Tub Splash, the largest plate is on the back, and two smaller ones on both sides. Flat sides of spashes should be facing inward. Inset bolts and securely tighten them with Nuts.
- 4). Pull the Overhead Grooming Arm to a proper length, and fasten it with the Clamp. Connect it to the Side Splash plates with bolts.
- 5). Put the Tub Splash onto the Tub Basin. Insert bolts and securely tighten them with Nuts. Put the Hair Catching Drain Insert in the drain hole of the Tub Basin and securely bolt the Hair Catching Drainage to the Waste Hose. Apply silicone sealant evenly onto the contact surface around the drain hole on the bottom of the Tub Basin. Put the Drain Head in the drain hole and screw the Drain Head to Drain Hose securely and use lock collar to fasten.

	). Bolt the Sprayer Holder and Dog Fixture Ring onto the back plate.
7)	). Bolt the Faucet onto the side plate.
8)	). Put The Anti-Slip Hair Catching Mat in the Tub Basin.
9)	). Insert the Step-on Ramp to the bottom of the Tub Basin, and make sure it stands steadily.
	CARE INSTRUCTIONS
Do	ash your tub with a mild detergent and rinse thoroughly. Wipe dry after cleaning.  not clean tubs with abrasive pads, scrapers, steel wool, wire brushes, hard water (water with a pH reading above 7.0), hydrochloric acid, steam high pressure water, bleach or any compounds containing chlorine or sodium hypochlorate, or ammonium chloride salts.
	SAFETY WARNING
1.	SAFETY WARNING  Use only as described in this manual. Use only manufacturer's recommended attachments.
2.	Use only as described in this manual. Use only manufacturer's recommended attachments.
2. 3.	Use only as described in this manual. Use only manufacturer's recommended attachments.  DO NOT use outdoors or on wet surfaces. DO NOT place the product on an uneven or soft ground.  This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsi-
1. 2. 3.	Use only as described in this manual. Use only manufacturer's recommended attachments.  DO NOT use outdoors or on wet surfaces. DO NOT place the product on an uneven or soft ground.  This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
2. 3. 4.	Use only as described in this manual. Use only manufacturer's recommended attachments.  DO NOT use outdoors or on wet surfaces. DO NOT place the product on an uneven or soft ground.  This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.  DO NOT modify, disassemble or repair.

Date Purchase:\_