



ZW9915 17 Grid Vehicle Barrier Assembly Instructions

Parts Identification:

 
- (A) Main Barrier Sections (2)
- (B) Extension Panels-Large (2)
- (C) Extension Panels-Small (2)
- (D) Threaded Rods (2)
- (E) Large Wing Nuts (2)
- (F) Large Lock Washers (2)
- (G) Plastic Clamp Plates (12)
- (H) Bolts & Small Wing Nuts (6)
- (I) Large Vinyl Tips (2)
- (J) Small Vinyl Tips (2)
- (K) Short Rubber Tube Sound Dampeners (2)
- (L) Suction Cup Feet (2)

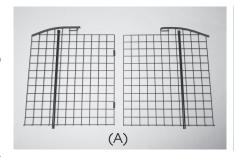

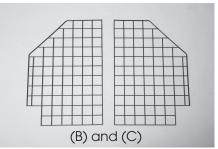










1. Measure the width of the interior of your vehicle to determine how wide the Main Barrier Section (A) should be.

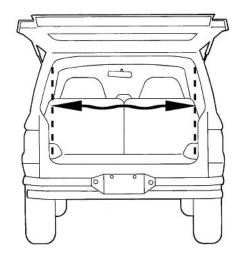

 Remove the Threaded Rods (D) from the tubes on the Main Barrier Sections (A) and set them aside. Identify the left and right main panels by placing the panels on the ground with the tubes down. Attach the Short Rubber Tube Sound Dampeners (K) to the Left Barrier Panel to eliminate any possible vibration rattles.

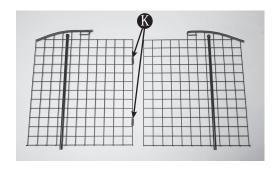

3. Lay the Left Main Barrier Panel on top of the Right Main Barrier Panel and adjust them to best fit your measurement from Step 1. The panels should be overlapped by at least 2 "squares," although the barrier will still be stable with one overlapping square.

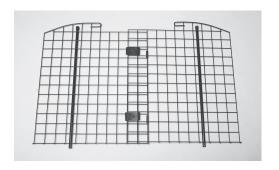

- 4. Locate 4 Plastic Clamp Plates (G), 2 small bolts and 2 small wing nuts (H). Secure these panels together with the Clamp Plates (G) as shown. Place the clamps so they securely grab 2 wires on each panel.
- 5. Locate the Threaded Rod (D), Large Vinyl Tips (I), the Large Wing Nuts (E) and the Large Lock Washers (F). Place the Lock Washer on the Threaded Rod and start the Wing Nut on the threads. Turn it so that it is about 5" up the rod, then slip the Large Vinyl Tip on the rod behind the nut.
- 6. Slide the Suction Cup Feet (L) onto each large vinyl tip.
- 7. Locate the Small Vinyl Tips (J). Place the Small Vinyl Tips on the top end of the steel tubing attached to the barrier. Locate the Extension Panels (B) or (C), the remaining 8 Plastic Clamp Plates (G), and the remaining four Bolts & Small Wing Nuts (H). Based on the size of your vehicle, determine the appropriate-size extension panels to use (small or large). Determine which one is the left and right panel by looking at the border wire along the side. The border wire should face the back of the vehicle. Position the Extension Panels in the optimal place and use the remaining Clamps, Bolts, and Small Wing Nuts to secure them in place as in Step 4. Tighten all wing nuts to keep the barrier securely in place BEFORE use.
- 8. Slide the threaded rods into the tubes. Carefully move the Main Barrier assembly with the rods inserted to your vehicle. Put it in place, making sure that the bend at the bottom faces the rear of the vehicle and the suction cups sit flat on the cargo area of the vehicle. Turn the Wing Nut on the threads to adjust the barrier height. Tighten the Wing Nuts until the barrier is snug.

LIMITED WARRANTY

This Guardian Gear® Grid Vehicle Barrier is warranted against defective material or workmanship for one year from the date of purchase. Any Guardian Gear® product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Shipping charges are not included in warranty returns. Please contact PetEdge Customer Service at 1-800-638-5754 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than PetEdge or has been subject to unreasonable use. Warranty is valid in the United States.











