

ProSelect®

Professional Kennels


ZW521042 Modular Kennel Cage Base Large



A X2



B X2



C X2



D X1




E X1



F X24



G X24

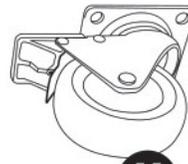


H X6




I X1

Parts List:

- A.) Rear Left and Front Right Panels (2)
- B.) Rear Right and Front Left Panels (2)
- C.) End Panels (2)
- D.) Center Panel (1)
- E.) Allen Wrench (1)
- F.) Bolts (24)
- G.) Nuts (24)
- H.) Wheels (6)
- I.) Standard Wrench (1)

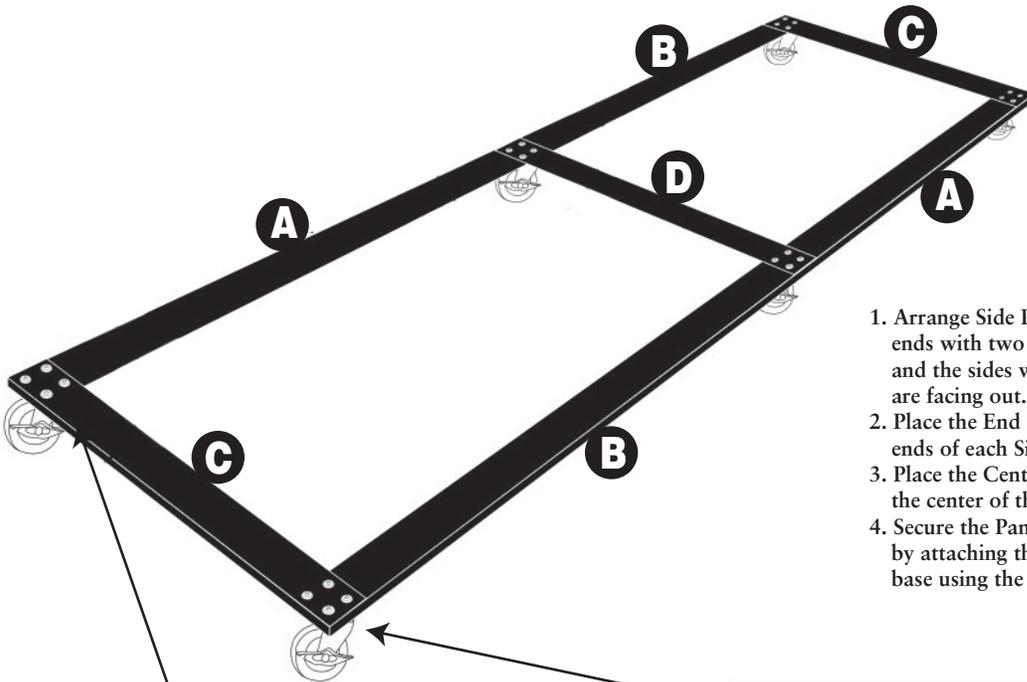

1. Arrange Side Panels (A and B) so that the ends with two holes are all facing center, and the sides with the metal edges are facing out.
2. Place the End Panels (C) over the ends of each Side Panel.
3. Place the Center Panel (D) over the center of the base.
4. Secure the Panels (A, B, C, and D) in place by attaching the six Wheels (H) to the base using the Bolts (F), Nuts (G) and 2 Wrenches (E and I).

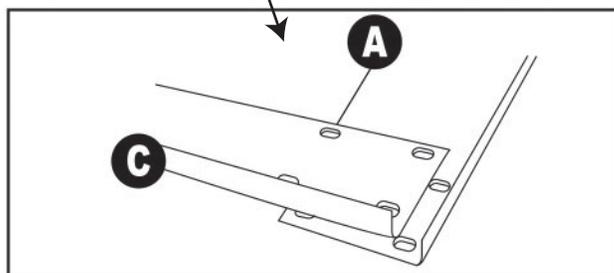

Place End Panels on top of side panels.

