




**GUARDIAN  
GEAR®**

# ZW30748 X-Large Pet Cot Assembly Instructions

- A.) Cot Cover (1)**
- B.) Legs (4)**
- C.) T-Shaped Brackets (4)**
- D.) Corner Pieces (4)**
- E.) Small Side Bars (4)**
- F.) Large Side Bars (2)**
- G.) U-Shaped Center Supports**
- H.) Width Bars (2)**

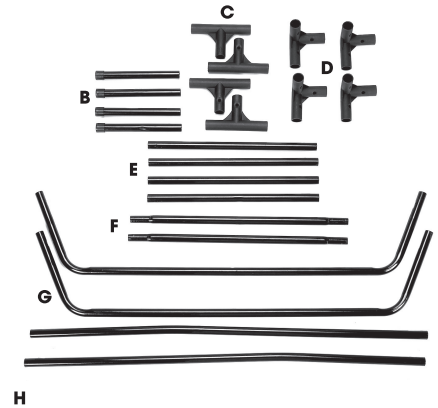

1. Lay Cot Cover (A) flat on the ground with the underside facing up. Open the velcro flaps.
2. Secure the two Width Bars (B) in the loops at the top and bottom of the Cot Cover (A).

3. Attach two Corner Pieces (C) to one Width Bar (B) as shown.



4. Connect two Small Side Bars (D) to the two attached Corner Pieces (C).



5. Connect a T-Shaped Bracket (H) to each of the two attached Small Side Bars (D).



6. Connect the two Large Side Bars (F) to the attached T-Shaped Brackets (H).



7. Connect the remaining two T-Shaped Brackets (H) to the attached Large Side Bars (F).



8. Connect the remaining two Small Side Bars (D) to the connected T-Shaped Brackets (C)




9. Connect these Small Side Bars (D) to the Width Bars (B) using the remaining two Corner Pieces (I).



10. Close the open velcro flaps on the end of the Cot Cover (A).



11. Attach the two U-Shaped Center Supports (F) to the stems of the T-Shaped Brackets (H) as shown.

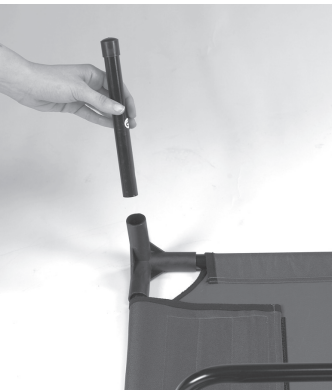

12. Attach the four Legs (G) to each of the four Corner Pieces (C).

