


ZW8198 Vehicle Barrier Assembly Instructions


Parts Identification:

- A. Telescoping Horizontal Tubes with Upright Support Brackets (3)
- B. Vertical Upright Tubes (2)
- C. Upright Extension Tubes (2)
- D. Wing Nuts (2)
- E. Threaded Rods (2)
- F. Foot Support Inserts (4)
- G. Support Feet (4)
- H. Screws (6)


H

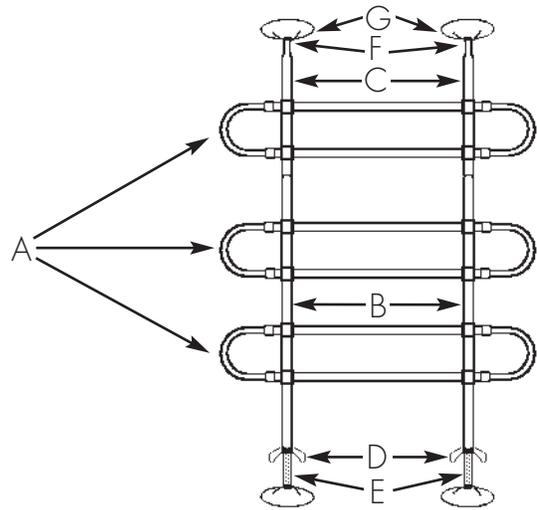


1. Insert Vertical Upright Tubes (B) through the upright support brackets on two of the Telescoping Horizontal Tubes (A).

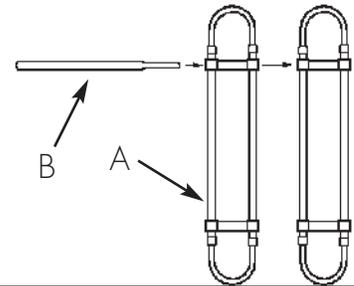


2. Slide the Upright Extension Tubes (C) onto the two tops of the Vertical Upright Tubes (B).

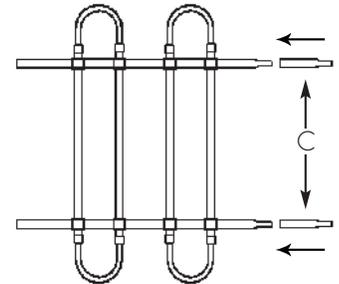


3. Attach the remaining Telescoping Horizontal Tube (A) to the ends of the Vertical Upright Tubes (B).

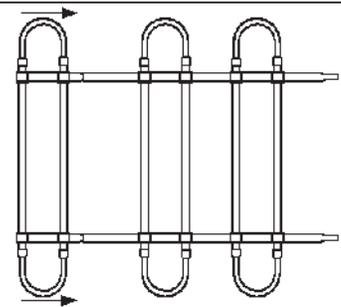

4. Attach the two Wing Nuts (D) to the two Threaded Rods (E) as shown. Press the Foot Support Inserts (F) into the Threaded Rods (E). (Note: Inserts may already be connected to the rods.)

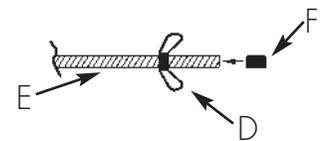


5. At an angle, press the Threaded Rods with attached Foot Support Inserts into two of the Support Feet (G).

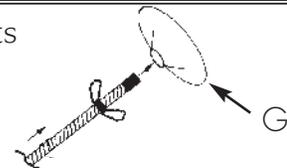


6. Take the Threaded Rod/Support Foot assemblies from Steps 4 & 5 and connect them to the Vertical Upright Tubes (B).

7. Insert the remaining two support feet (G) onto the tops of the Upright Extension Tubes (C). (Note: Unless they are already installed, do not use the extra foot support inserts for this step.)

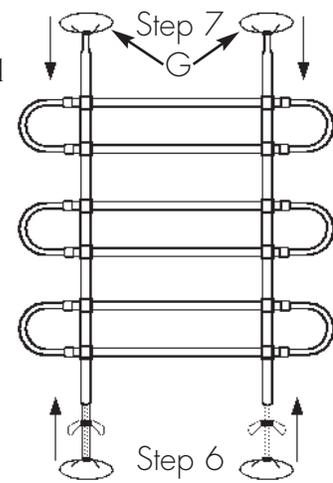

8. Place the Barrier in your vehicle with Threaded Rod Assembly portion against the floor, and extend the barrier vertically until it fits snugly against the floor and roof of the vehicle. Use the Wing Nuts (D) to make adjustments.

9. Once the Barrier is firmly installed from top to bottom, adjust the widths of the Telescoping Horizontal Tubes (A) for a secure fit.

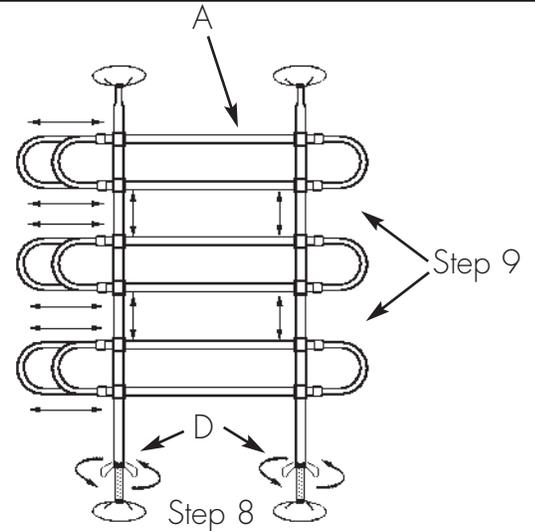

10. When the Barrier is adjusted to your satisfaction, lock your adjustments in place by installing the six Screws (H). Thread the screws through the thin wall portion (the larger hole) of the plastic vertical upright support brackets (A).

