


# TP7500 17 • Master Equipment Hydraulic Table Instructions

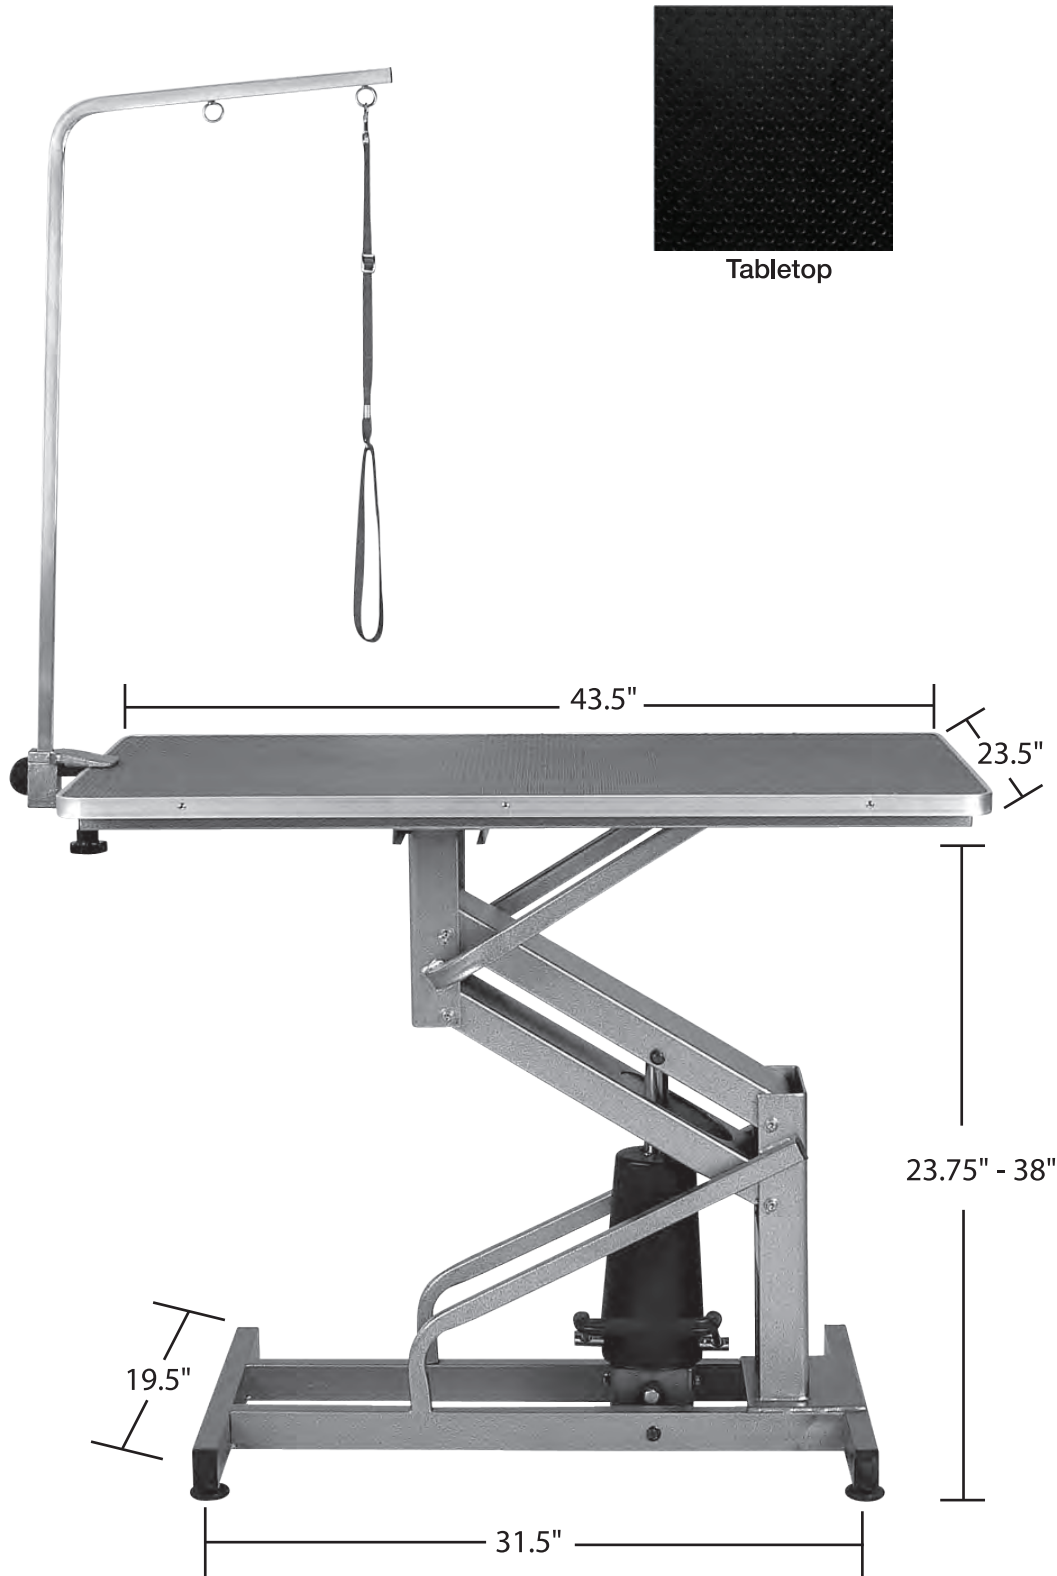

## Accessories Included:

- Grooming Arm with Clamp
- 20" Grooming Loop Black
- Leg Levelers (4)

## Materials & Color:

- Table Frame: 18 gauge, 1.2mm thick steel. Ivory powder-coated finish.
- Tabletop: ¾" Wood with black rubber matting. Aluminum trim.
- Grooming Arm: 19 gauge, 1.1 mm thick type 304 stainless steel. Clamp is 18 gauge, 1.2mm thick iron with gray powder-coated finish. Knobs are black polypropylene. Screws are galvanized iron.
- Foot Pedal: Iron with chrome plating and black rubber.

## Other Features:


- Weight Capacity: 220 lbs.
- Rate of Descent: 2.2 inches/second.
- Rising Rate: Controlled by User

## TP7500 Hydraulic Grooming Table

- Lifts up to 220 lbs
- 41¼" x 23 ½" x 1" thick tabletop
- Height adjusts from 22" to 37½"
- Heavy-duty Z-style frame
- Durable, rust-resistant, powder coated finish
- Includes grooming arm and loop



Attach Grooming Arm to Tabletop.  
Use the bottom turn knob on the arm to adjust the width of the clamp. The upper turn knob adjusts the height of the arm.

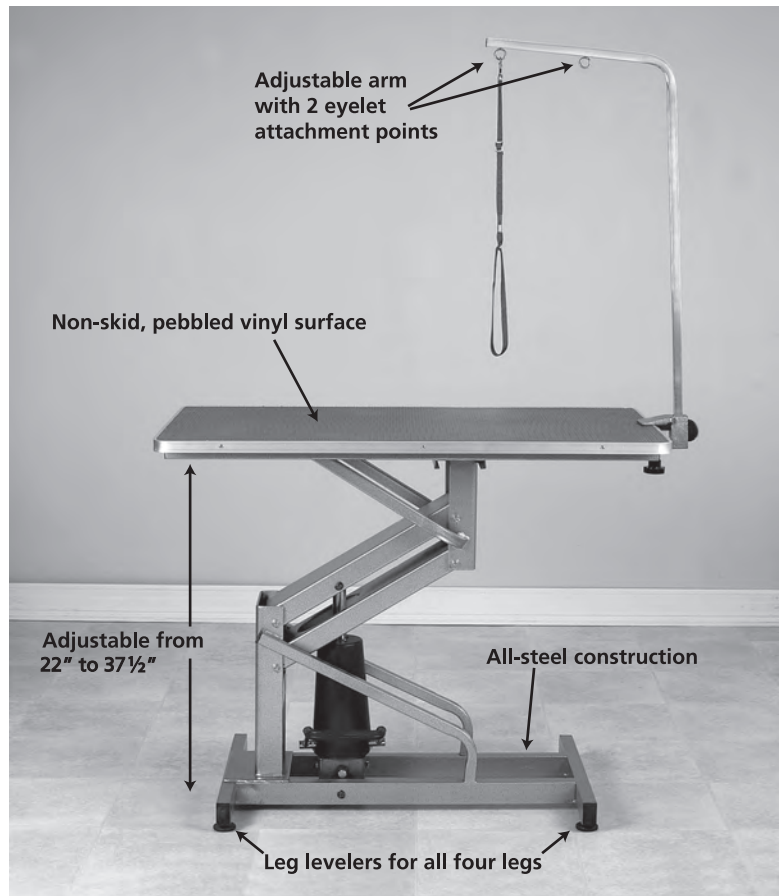

### Table Operation:

1. Before use, make sure table is level by turning leveling feet under each base leg.
2. This grooming table is equipped with a hydraulic pump lever that raises and lowers the table. Place your foot on the pump lever and raise the table using half pumps until you reach the desired height. To lock table into place to prevent table from rotating or lowering, place foot under lever and pull up as far as it will go.
3. To lower table, hold pump lever all the way down to release pressure. If table does not descend by itself, place your hand on the table and push down while holding pump lever down with your foot.
4. To reduce strain and unnecessary lifting of large animals, it is recommended to lower the table to the minimum height and help animals step up onto table before positioning table at desired height for grooming.
5. Once animal is positioned on table, place the grooming loop that is attached to grooming arm around animal's neck and adjust loop to fit comfortably by moving arm up or down.

### Care and Maintenance:

Unplug table. Wipe off tabletop with a sponge or damp cloth and mild cleaner after use. Use mild soap and water, or a non-caustic cleaner. Tabletop can also be disinfected using a diluted disinfectant solution or a diluted bleach and water solution. Wipe off any excess water. Periodically vacuum or dry wipe lifting mechanism to keep it free of hair and debris. Base can also be cleaned when needed with damp cloth or sponge. Dry off any excess water. If table is used in a damp or humid environment, periodically spray the hydraulic piston with WD40 to prevent rust.

**CAUTION: Do not leave an animal on the table unattended. Use a grooming loop to properly restrain animal. Quick release loops or clips are recommended to prevent injury in case animal accidentally jumps off the table. Do not use a choke type lead or collar.**

1. Do not allow unsupervised children to play near or operate the table.
2. Use this table only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this grooming table if it is damaged or if it is not working properly. If table is not working or is damaged, contact PetEdge Customer Service at 1-800-638-5754.
4. Do not place or store this table where it may be damaged by an animal or exposed to weather. Store with table at the lowest height.

## LIMITED WARRANTY

This Master Equipment® Hydraulic Table Schematic is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment® product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact Boss Pet Products Customer Service at 1-800-638-5754 regarding any defective product. Boss Pet Products will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. Boss Pet Products will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than Boss Pet Products or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchase: \_\_\_\_\_

**bpp**  
boss pet products

Manufactured by  
© Boss Pet Products, Inc., Danvers, MA 01923  
MADE IN CHINA

TP7500 17 Master Equipment®  
Hydraulic Table Schematic

REV. 11/22