



TP7000 Electric Grooming Table with Remote Control Lift

- Lifts up to 200 lbs
- 43 1/4" L x 23 1/2" W x 1" thick tabletop
- Height adjusts from 15" to 38 1/2"
- X-style frame with wide H-style base for extra stability
- Unique remote control lift for easy height adjustments
- Includes two grooming arms



Parts List



Overhead Grooming Arm

- A) Overhead Bar (1)
- B) Support Bar (2)
- C) Arm Support Base (2)
- D) Connectors (2)
- E) Grooming Loop (2)

Standard Grooming Arm

- F) Grooming Arm (1)
- C) Arm Support Base (1)
- E) Grooming Loop (1)

- G) Remote Control
- H) Table

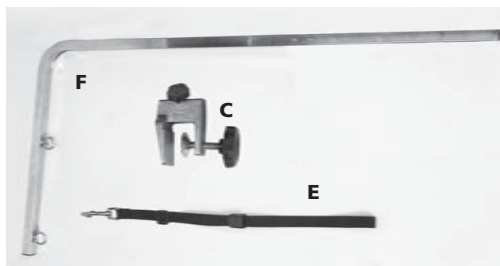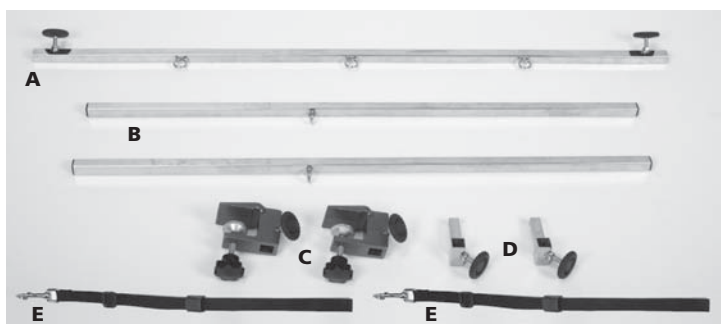

Instructions:

SAVE THESE INSTRUCTIONS • **IMPORTANT SAFEGUARDS** Basic safety instructions should be followed when using electrical appliances, including the following:

READ ALL INSTRUCTIONS BEFORE USING. DESIGNED FOR ANIMAL USE ONLY.

OPERATING INSTRUCTIONS:

This table is designed for use with standard 120V outlet. This grooming table also has a polarized plug (one blade is wider than the other). As an important safety feature, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to modify the plug in any way. This table is also designed with an automatic shut-off. Motor, transformer, and cord are all UL Approved. We recommend that this table be used with a surge protector at all times.

OPERATING TABLE:

1. Table is fully assembled. Before use, make sure table is level by turning leveling feet under each base leg.
Plug cord into any standard 110/120V wall outlet.
2. This grooming table is equipped with a remote control mechanism that lifts and lowers table to the desired height. Attach the Remote Control Holder to side of the grooming arm using the screws. Make sure to thread the Remote Control cord over the top half of the table frame so the frame doesn't pinch the cord when the table lowers.
3. To reduce strain and unnecessary lifting of large animals, it is recommended to lower the table to minimum height and let animal step up onto table before positioning table to desired height for grooming.
4. Once animal is positioned on table, place the grooming loop that is attached to grooming arm around animal's neck and adjust to fit comfortably.