


# TP4180 • Master Equipment PolyPro SpaTub Operating Instructions

В

Parts List A) SpaTub Basin (1)

B) Stainless-Steel Floor Grate (1)
C) Plastic Grooming Platform (1)
D) Sprayer Head (1)
E) Sprayer Hose (1)
F) Drain Cover (1)
G) Leash Hooks (2)
H) Adjustable Drainage Pipe (1)










### **Operating Instructions:**



1. Insert the Leash Hooks (G) into the holes on the SpaTub Basin (A) wall, on the side opposite the Sprayer Head (D).



2. Attach Adjustable Drainage Pipe (H) to the drainage system underneath the SpaTub Basin (A). Adjust length of Adjustable Drainage Pipe (H) as needed.

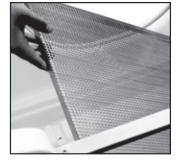

3. Place the Stainless-Steel Floor Grate (B) on the floor of the SpaTub Basin (A) and then place the Drain Cover (F) over the drain.



4. To lock the drainage system and fill the SpaTub Basin (A) with water, lift the drain-lock switch. To drain water from the SpaTub Basin (A), push the drain-lock switch down.



5. Insert the Plastic Grooming Platform (C) into the SpaTub Basin (A) when grooming small dogs.



6. Connect one end of the Sprayer Hose (E) to the Sprayer Head (D) and the other end to the tap on the water supply (not included). Tighten to secure.

#### **Care Instructions:**


Rinse thoroughly after bathing pet. Make sure tub is clean and dry after use. Do not use harsh or abrasive cleaners, bleach, or tools with metal or textured parts. These can scratch or damage the tub. Check electric cord and plug for signs of damage or wear.



## TP4180 • Master Equipment PolyPro SpaTub Assembly Instructions

## **Control Panel:**

J) Power Switch K) Timer L) Temperature Control M) Bubble Control N) Heat Control O) On/Off

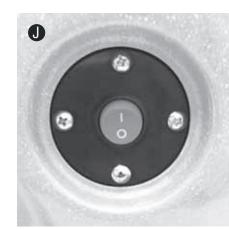



### **Hydrotherapy Instructions:**

- 1. Before beginning hydrotherapy, push the drain-lock switch on the Tub Basin Floor (A) to ensure drainage system is closed.
- 2. Help pet enter SpaTub Basin (A) and secure in place by attaching lead to one of the Leash Hooks (G).
- 3. Activate the sprayer and adjust temperature as desired. Water temperature should not exceed 113°F (45°C). Water level should not exceed height of pet's belly.
- 4. Connect Power Cord (I) to power supply, activate the Power Switch (J), followed by the On/Off Switch (P), and set the Timer (K) to desired time. Hydrotherapy sessions should not exceed 20 minutes.
- 5. Use Bubble Control (M), to adjust bubbles as desired.
- 6. Activate Heat Control Switch (N) if additional heat is desired for hydrotherapy. Water temperature should not exceed 113°F (45°C).
- 7. After use, shut off Bubble Control (M) and Heat Control Switch (N) before hitting On/Off Switch (O).
- 8. Press the Power Switch (J) to completely shut down SpaTub.
- 9. Unplug Power Cord from power supply and clean SpaTub Basin (A) thoroughly. Do not use harsh or abrasive cleaners, bleach, or tools with metal or textured parts, as these can scratch or damage the tub—clean using mild soap or cleanser.

#### Warning:

Consult a pet-care professional before bathing/hydrotherapy, especially for older or ailing pets. PetEdge is not responsible for any injuries that may occur.

- 1. The SpaTub can only connect to a ground 110V-240V power source.
- 2. DO NOT connect to power source with wet hands.
- 3. Carefully inspect tub before using, and clean out any debris before each use.
- 4. Please remove all accessories (bandanas, bows, barrettes, etc.) from dog before bathing, as accessories can cause damage to tub.
- 5. Recommended for adult use only-closely supervise children while tub is in use.
- 6. During the bathing process, a knowledgeable pet-care professional should be on-hand to supervise at all times.
- 7. Designed for indoor use only. Keep surrounding areas clean and dry.
- 8. Designed for pet bathing and hydrotherapy only-not intended for human use.
- 9. Operator is discouraged from adding extra wire to extend the power cable, changing the plug, stacking anything on top of the power cable, keeping the power cable close to a high-temperature source, and using a porous plus socket—a bad connection may result in fire or electric shock, and any user modifications or damage not caused by defective material or workmanship will void warranty.
- 10. When SpaTub is not in use, unplug from power source. When unplugging from power source, operator should hold plug firmly and pull. DO NOT unplug by pulling on power cord.
- 11. Keep surrounding areas dry at all times while SpaTub is in use.
- 12. Regularly inspect plug, power cable, and electrical components for signs of wear and/or damage, and contact PetEdge Technical Support if any damage is found.
- 13. Water temperature should not exceed 113°F (45°C), and hydrotherapy sessions should not exceed 20 minutes.

## LIMITED WARRANTY

This Master Equipment<sup>™</sup> PolyPro SpaTub is warranted against defective material or workmanship for one year from the date of purchase. Any Master equipment<sup>™</sup> product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact PetEdge Customer Service at 1-800-638-5754 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure, or malfunction of this product caused by normal wear, abuse, misuse, or unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than PetEdge, or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchased: